


Start Here

1. Power TV on

2. Select Input


3. Select   to Select the input Source

4. Volume

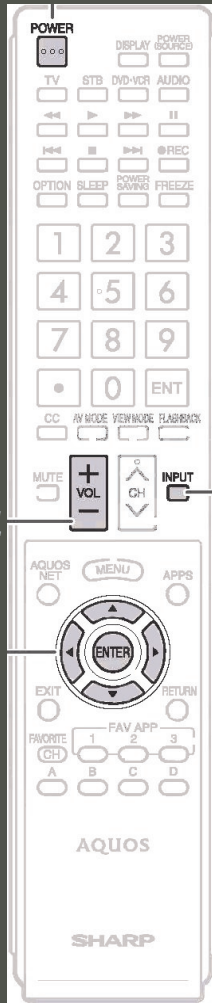

Input	Availability
TV	Not Available
1 Desktop-PC	Available
2 CD/DVD/VHS	Available
3 HDMI-Lapto	Available
HDMI4	Not Available
COMPONENT	Not Available
VIDEO1	Not Available
VIDEO2	Not Available
8 VGA-Lapto	Available

1 Desktop-PC

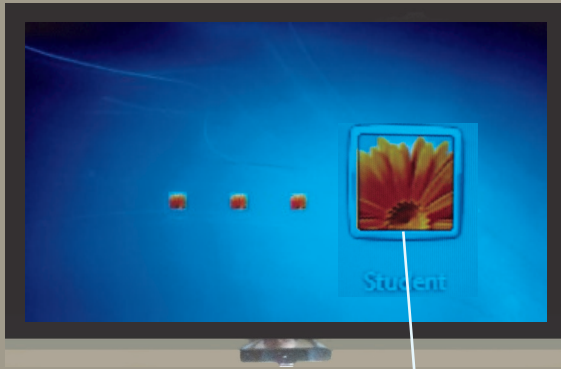

Select "Student"
Password: student

Wireless Keyboard

Wireless Mouse

Left click Right click

Press + hold + move mouse to move pointer

CD Tray Eject USB Ports Power On

Flash Drive


2 CD/DVD/VHS

1. Power Unit on

VHS

Inserting a Video Cassette

Insert a cassette.
- The unit turns on automatically.

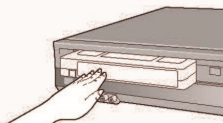

To eject:
From the main unit:
EJECT - The unit turns on automatically.

Or
From the remote control

1 DRIVE SELECT to select the VHS drive.
2 STOP Press and hold for 3 or more seconds.


Eject VHS Tray

Eject CD/DVD Tray

CD/DVD

Inserting Discs


OPEN/CLOSE to open the tray.
- Insert a disc.
- Press [OPEN/CLOSE] again to close the tray.

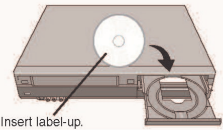

Insert label-up.



3

HDMI-Lapto

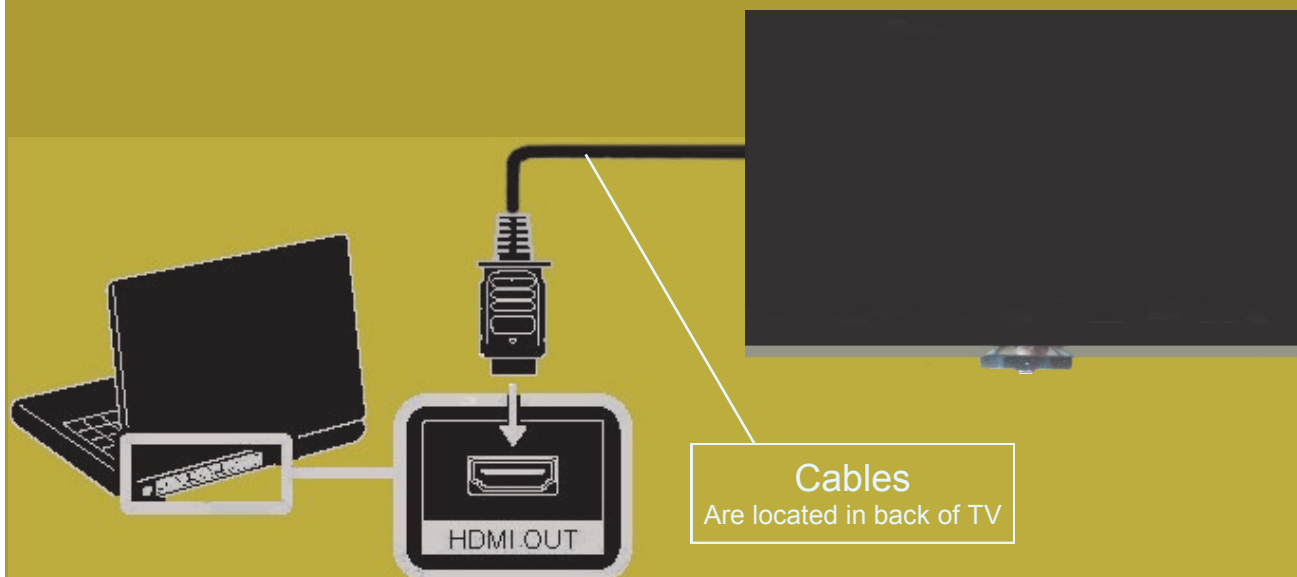

8

VGA-Laptop

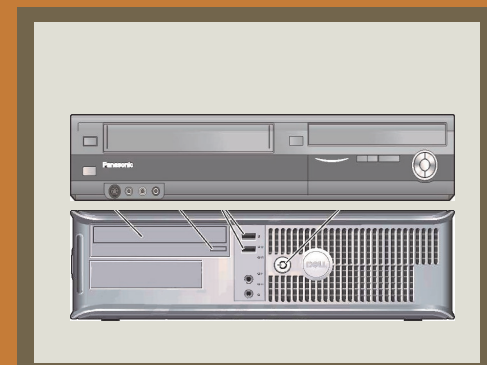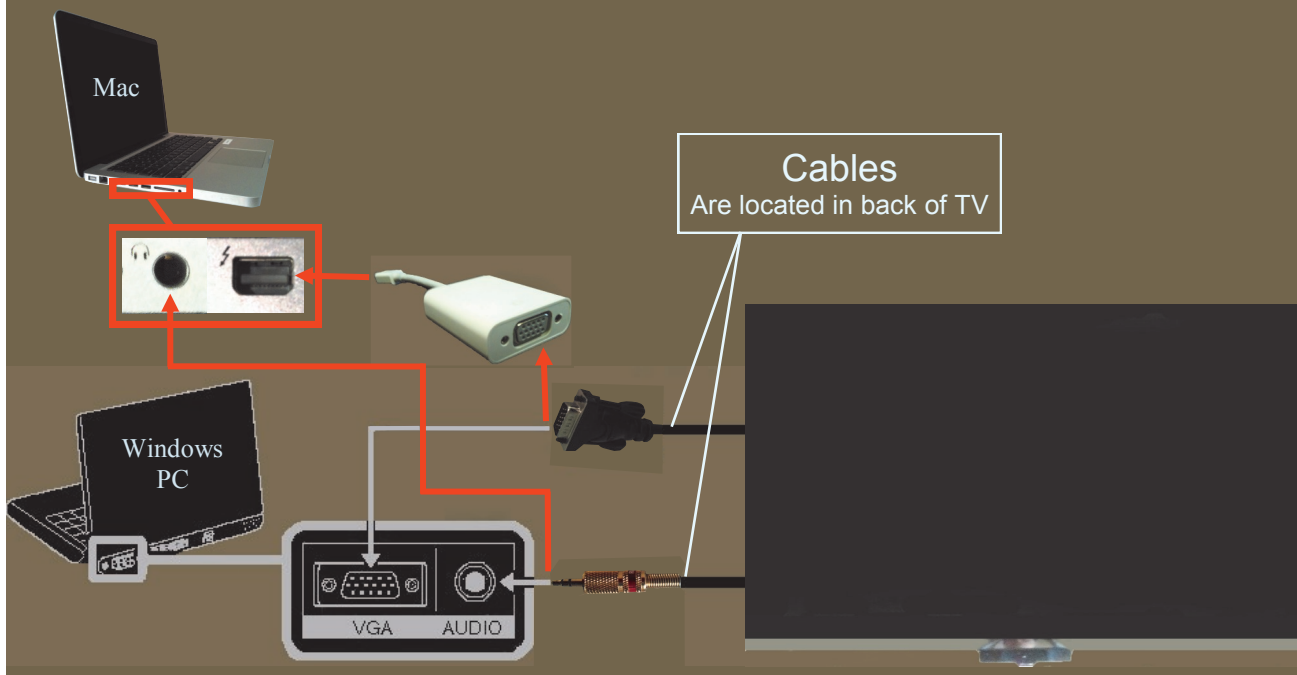

Audio Visual Equipment Guide

Contact us:
AV Support

805-679-6119

AVSupport@Pacifica.edu

Pacifica Graduate Institute